8. MASTER DISPOSAL AREA

CONTENTS

Operation and Function VIII-1

1. Master Removal Section VIII-2
[Theory of Operation]
1. Clamp Plate Open System VIII-2
2. Master Removal and Disposal System VIII-3
3. Master Removal and Disposal Check System VIII-4

[Removal Procedures & Precautions for Installation]
1. Master Removal Unit VIII-6

[Adjustment Procedures]
1. Projected Position of Master Removal Hooks VIII-7

[Removal Procedures & Precautions for Installation]

1. Master Removal Unit

– Removal Procedures –

1) Remove the Drum from the machine and the Master disposal box from the Master removal unit.
2) Slide the Image scanning section toward the paper receiving side and remove the two straight knurl screws fixing the Vertical transport roller holder to the Master removal unit. Then place the roller holder aside.
3) Remove the four mounting screws on the Master removal unit.
4) Disconnect the connectors of the Master removal wire harness (15P), and lift up the unit out of the machine with a tilt to the paper feed side.

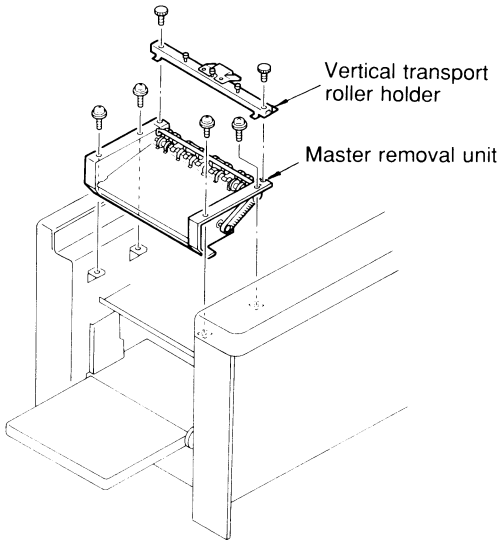

– Precautions for Installation –

- Position the Master removal unit nearer to the non-operator and drum sides so that the unit does not contact the operator side frame of the machine.